


HITACHI OCR SCANNER HT-4139

Installation Guide

1 Check Contents of Package			
Input Tray (2) Output Tray Hopper	Power Cord USB cable Stacker Guide	Test Sheet (5 sheets) Device Installation Manual Instruction Manual	Image Scanner Driver Installation Guide Image Scanner Drivers ISIS / TWAIN Driver Users Guide CD Imprinter Ink Ribbon


2 Remove Mirror Protection Sheet

- (1) Peel off the tape from the Main Unit and the Hopper
- (2) Push the Main Latch Button to open the Main Cover, and remove the Mirror Protection Sheet.

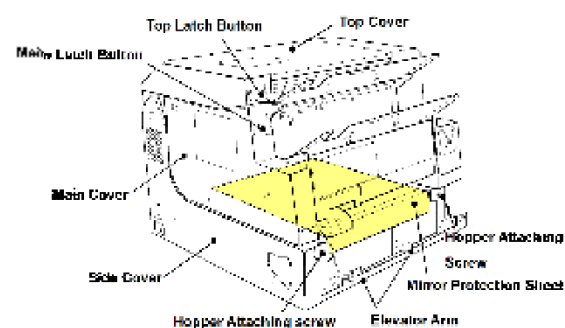

3 Attach Hopper


- (1) Move the Elevator Arms down as shown in the picture below.
 - At shipment
 - At installation
- (2) Remove the Hopper Cover by removing 2 screws.
- (3) Loosen the Hopper Attaching Screw at the left of the device and attach the Hopper ASSY.
- (4) Lift the Hopper Plate so the Elevator Arm will be under the Hopper Plate.
- (5) Secure the Hopper with screws and attach the Hopper Cover.
- (6) Close the Main Cover by pushing the "PUSH" labels on both sides of the Main cover.

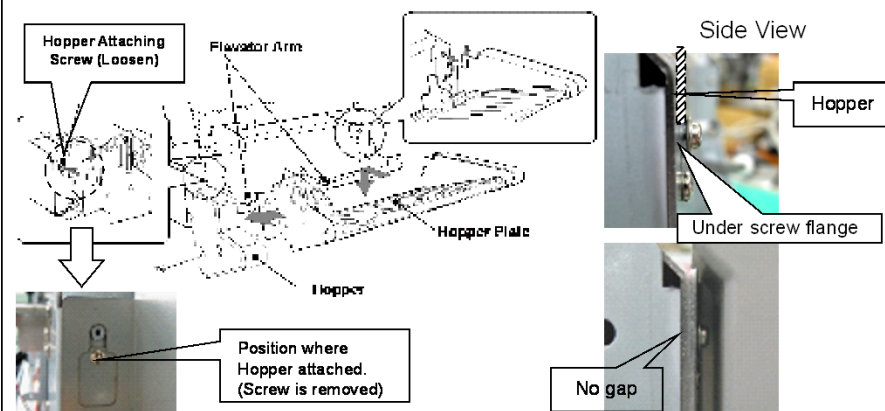

Note: Do not loosen the Hopper Attaching Screw too much. It may create a gap between the attachments, causing a glitch.


4 Attach Output Tray

- (1) Push the Top Latch Button to open the Top Cover
- (2) Fit 4 hooks of the Output Tray (Stacker) ASSY into Output Tray -1. Secure the Output Tray with by attaching 3 screws.
- (3) Attach Output Tray-2 to Output Tray ASSY, following the same procedure in (2).
- (4) Close the Top Cover

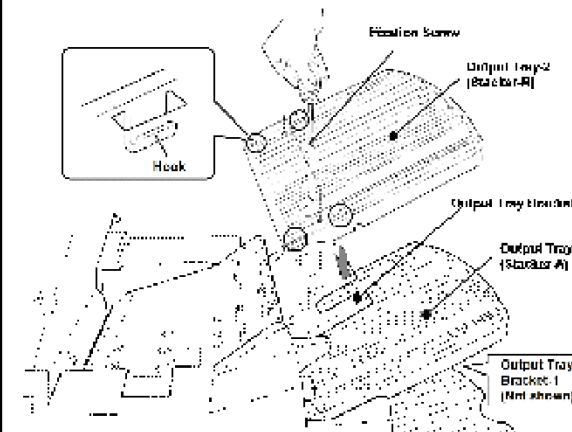

5 Attach Stacker Guide

Secure the Stacker Guide with the Fixation Screw.

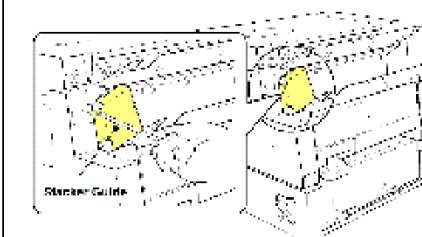


6 Set Ribbon Cassette (1)

- (1) Push the Top Latch Button to open the Top Cover. Push the "PUSH OPEN" Mark area on the Numbering (Imprinting) Cover and open it.




- (2) To tighten the Ribbon, turn the knob in the direction of the arrow (clockwise).

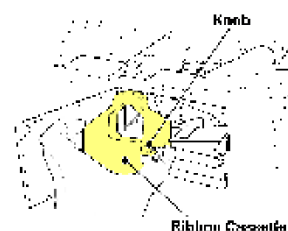

7 Set Ribbon Cassette (2)

- (3) Put the Ribbon Cassette in the Numbering (Imprinting) Cover without catching the tip, and push it to the "standard" position.
- (4) Close the Numbering (Imprinting) Cover and the Top Cover.

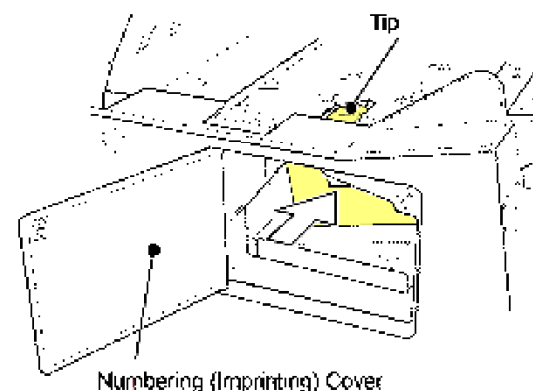


8 Connect Cables

- (1) Connect the power cable to the Inlet connector that is at the side of the device. The other side should be connected to the power outlet.

CAUTION Do not turn the Power on yet

- (2) Connect the USB cable to the USB connector located at back of the device and secure it with the clamp next to it. (Lock the USB connector)

CAUTION Do Not connect the USB cable to the PC yet

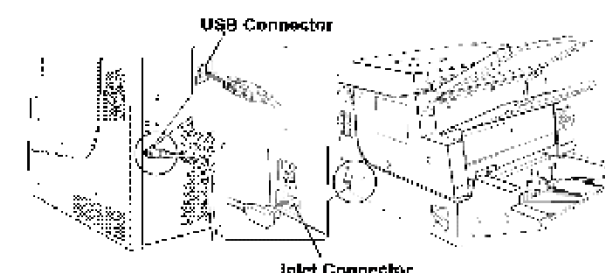

9 Install TWAIN/ISIS Driver

- (1) Download files from the CD
- (2) Reboot the host
- (3) Connect USB cable to the host
- (4) Turn on the power to the Device
- (5) Install the driver